



Fiberglass Specialties, Incorporated
500 Austin Ave. Henderson, TX 75652
800-527-1459
www.FSIWEB.com



Auto Fill Installation:

Note: PVC piping by others

1. Drill 1 1/8" holes in side wall of pool in locations shown on drawing below. Make sure distance from heater is not greater than cord lengths will allow.
2. Smooth surface of drilled area
3. Install port fittings with gasket on finished side of pool wall
4. Install Pressure Switch and Fill valve onto port fittings
5. Plug Pressure Switch and Fill Valve into controller
6. Install air button in a convenient location. The air button can be installed on the lip of the pool or it can be mounted in decorator faceplate by others.
7. Plug controller into H series heater
8. Silicon cover onto fill ports
9. Check for leaks as pool begins to fill

